

IN THE BOX

CUSTOM

- 1 Pair Custom Earmolds
- 1 Bottle Oto-Ease
- 1 Pair Filters
- 1 Bottle Oto-Cleans
- 1 Carrying Pouch
- Owners Manual



UNIVERSAL

- 1 Pair Medium Shells
- 1 Pair Large Shells
- Detachable Cord
- 1 Pair Filters
- Carrying Pouch
- Owners Manual



UNIVERSAL FIT

SHOOTER

TRU Shooters are designed specifically for hunting and shooting enthusiasts. The TRU Shooter features an 18 dB passive filter with a "switch" that is used to open and close the filter. When open, the filter offers 5 dB of noise reduction. When closed, the filter offers 18 dB noise reduction. The TRU Shooter is a great option for shooting at indoor or outdoor gun ranges, wilderness hunting or for any environment where "loud impulse noises" (up to 166 dB) may be present.



Variable Protection
AVERAGE ATTENUATION
18 dB Filter (NRR 7)



Toggle between 5 dB and 18 dB of protection with the flip of a switch.
Closed - 5 dB
Open - 18 dB

OPEN Filter - Permits natural hearing so that voices and background sounds come through clearly. The open filters allow air to pass in and out of the ear canal, meaning the wearer retains sound directionality and spatiality -- key components of the situational awareness shooters really need in hunting or combat situations.

CLOSED Filter - Provides 18 dB of reduction to background noise, taking the edge off of loud ambient sounds. This mode offers protection from both blast and steady-state noise, making it a very versatile hearing protector.

IDEAL FOR:

- Shooting Sports
- Hunting
- Impulse Noises up to 166 dB
- Combat



THE RIGHT FIT FOR YOU



CUSTOM



UNIVERSAL

FIT/COMFORT

- Superior custom fit
- More comfortable
- Made from a custom impression of the ear
- 2 earpiece shell sizes (Large and Small)
- Offers users the best possible universal fit, regardless of users' ear shape or size

AVAILABILITY

- 5-10 days production
- In-Stock
- Immediate shipping

FILTER OPTIONS

- 4 filter options
 - 10 dB
 - 16 dB
 - 20 dB
 - 25 dB
- 2 filter categories
 1. WM (Professional)
 - Superior noise attenuation
 - 16 dB
 - 25 dB
 2. WR (Recreational)
 - 25 dB

***Note:**
TRU filters are interchangeable for Universal and Custom earpieces.

Additional filters may be purchased separately.

COLOR OPTIONS

- 21 solid colors
- Cateye (clear + 1 color)
- Swirl (2-3 colors)
- Thousands of color combinations
- WM Shell Color
 - Smoke
- WR Shell Colors
 - Smoke
 - Blue
 - Pink

Visit our online customizer to build your pair of TRU Customs:
westone.com/custom_hpd_designer

COST

- From \$199.99
- WM (Professional) - \$45.00
- WR (Recreational) - \$19.99
- Replacement Shells - \$5.00

TRU

FILTERED HEARING PROTECTION



CUSTOM & UNIVERSAL FIT

FULL-FREQUENCY™

FILTERED HEARING PROTECTION

TRU



LEARN MORE

westone.com

2235 Executive Circle, Colorado Springs, CO 80906
Phone: 719-540-9333 | Toll-Free: 800-525-5071
PN 49990 Rev 5

Westone
THE IN-EAR EXPERTS

TRU TECHNOLOGY

Westone's TRU product line brings together high-performance filter technology with the latest in universal and custom earpieces to provide comfortable, discreet hearing protection options that are ideal for a variety of loud settings. TRU hearing protection has been specifically designed to reduce noise exposure while still maintaining sound quality across the sound frequency spectrum.

CUSTOM FIT




TRU Customs allow you to protect your hearing by selecting your level of attenuation to match your own unique listening preferences. Each custom earpiece is precisely-fitted to your ear canal utilizing 3D digital scanning technology and manufacturing to provide maximum comfort, a discreet size and incredible clarity.



AVAILABLE EARMOLD COLORS:

SOLID (1 color)



CLEAR



CATEYE



(clear + 1 color)


SWYRLS



(2-3 colors)

TRU Custom orders should be placed through a local hearing healthcare professional who will take your required ear impressions to complete the order.

TRU CUSTOM FILTERS

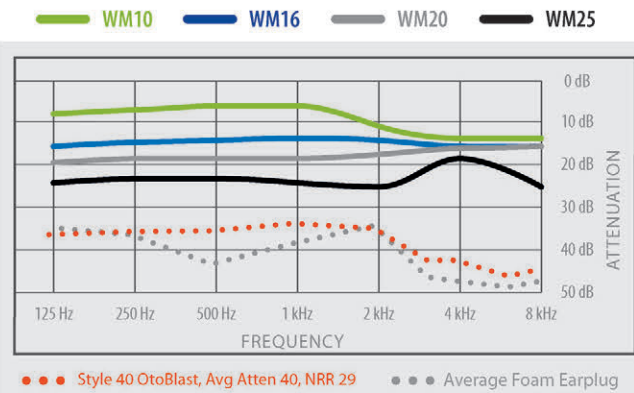

UNIVERSAL FIT

RECREATIONAL


Westone's TRU Recreational earpieces offer a great off-the-shelf hearing protection solution that provides users with a comfortable and well-tuned listening experience for any situation where mid-level noise exposure may be prominent. Replacement earpiece shells without filters can be purchased separately.



AVAILABLE SHELL COLORS:



IDEAL FOR:

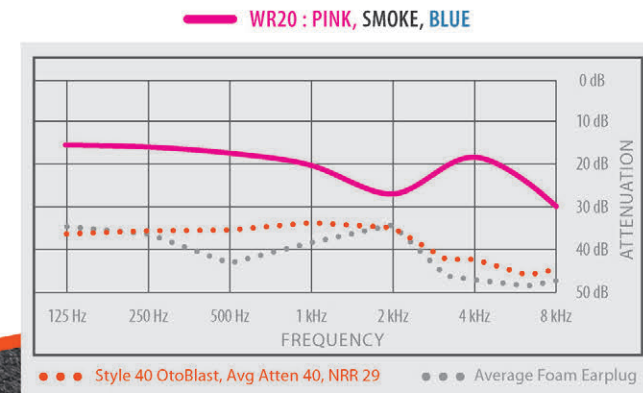

UNIVERSAL FIT

PROFESSIONAL

TRU Professional earpieces offer excellent protection and comfortable long-term use when clarity is a must. TRU Professionals utilize a slightly superior attenuating filter than the TRU Recreational filter. These are the same filters used in our TRU Customs, which makes upgrading to a custom earpiece simple.



IDEAL FOR:

